

Swede Survival Systems Phase 5 - Multi-Story

The Multi-Story, Multi-Fire Training System shall consist of two important parts. The first is the five container training enclosure. The second is the training curriculum developed and refined over the past 18 years by the Swedish Rescue Services College. The combination of the unique construction of the enclosure and the training curriculum shall provide invaluable training to firefighters. Firefighters will have the opportunity to gain tremendous insight into the complexities inherent in multi-story, multi-fire involved structural fire situations.



COMPARTMENTS OF THE PHASE 5 TRAINING SYSTEM

The training enclosure shall be made up of two fire compartments located in two of the five containers, these are the burn chambers. The remaining compartments are utilized for staging, approach and search and rescue operations, these are the cold chambers.

CHAMBER WALL AND CEILING INSULATION

Chamber walls and ceilings are lined with high temperature insulation material, which is protected behind a seam welded layer of 8 gauge steel. This protects the structural integrity of the container from the grueling temperature swings the container will withstand over many hundreds of training evolutions.

TWO DAY INSTRUCTORS CERTIFICATION WORKSHOP



This workshop is conducted by two experienced instructors. These instructors have conducted at least 100 training evolutions in a Phase 5 system. This training and certification process assures that instructors are thoroughly familiarized with the safe and effective use of the Phase 5 training system.



The Phase 5 System – The Burn Chamber located on the first floor.



Interior Stairwell is equipped with hand rails on either side which adhere to OSHA regulations.

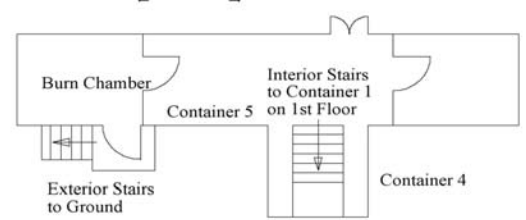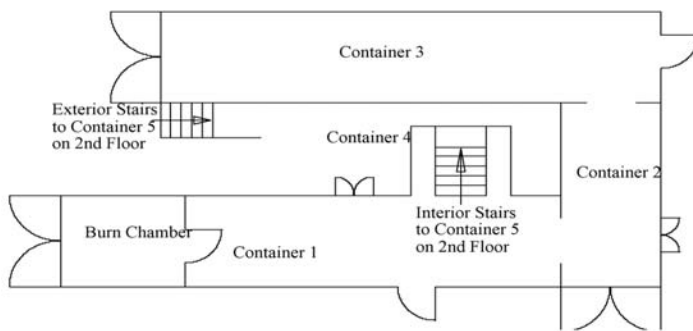

ST-9343-2007

TECHNICAL DATA

- Partek high performance insulation
- 14 gauge steel exterior
- 8 gauge sheet metal covering insulation
- 10 gauge steel flooring
- 5/8" chain on walls, ceiling, and doors of burn area
- Concrete paving to line floor of burn area
- Ventilation System
- Doors and windows in the Cold Chambers
- Hand rails on the roof
- Interior & exterior stairs
- Crib fire drum- 2 each
- Paint - Royal Blue or Red Oxide

THE SYSTEM INCLUDES

- Complete Phase 5 system
- 2-day training course for up to 12 Instructors
- Instructor Manuals & S.O.P.'s
- Instructors Certification upon completion

TRAINING COURSE INCLUDES

- Two Certified Instructors
- Ignition Sources
- Fire behavior
- Formation of fire gases
- Fire control
- Container operations
- Hydration
- Heat stress
- Hydraulic Ventilation
- SCBA & Safety Equipment training
- Heat stress management
- Smoke Conditions Recognition
- Container Management
- Safety

OPTIONS AVAILABLE

- Custom Paint Colors and Logos
- Training Instructor from Swedish Rescue Services
- Agency College in Skovde, Sweden

"... There are so many advantages to the Phase 5 training system. We can safely and readily train our firefighters in; entry, search & rescue, suppression, ventilation, communications, as well as firefighter safety, survival and RIT. The options are limitless."

Brett Laitila – Asst. Fire Training Instructor
Thornapple Township Emergency Services
Middleville, MI

"I was one of three personnel to receive training on the Phase 3 Swede Survival System in Sweden. Not only is Phase 3 an excellent training tool, but the whole training program is very impressive."

Assistant Chief Training
J. Gregory Magjill
Miramar Fire Dept, Marine Corp Air
Station, CA

"During the past six months the LAFD has conducted over 250 burns without incident of injury or damaged equipment."

Battalion Chief John Nowell
Los Angeles City Fire Dept.

Draeger Safety Systems, Inc.
101 Technology Drive
Pittsburgh, PA 15275-1057
USA
Tel +1 412 787 8383
Fax +1 412 787 2207
www.draeger.com

CUSTOMER SERVICE
Tel +1 800 858 1737
Fax +1 800 922 5519

DRAEGER SAFETY SYSTEMS, INC.
Swede Survival Systems Division
700 Second Street
Suite G
Encinitas, California 92024
USA
Tel +1 760-634-7740
Fax +1 760-634-7746

swede@swedesurvival.com
www.swedesurvival.com

DRAEGER SAFETY SYSTEMS, LTD.
Fire Training Systems Division
601 Camden Road
Napanea, Ontario K7R 1G2
Canada
Tel +1 888-881-3875
Fax +1 613-354-0139

info@ftsfire.com
www.ftsfire.com

GERMANY
Dräger Safety AG & Co. KGaA
Revalstrasse 1
23560 Lübeck, Germany
Tel +1 49 451 882-0
Fax +1 49 451 882-2080